



# How to clean the Epson Stylus Photo 1400

Light cleaning maintenance for Epson Stylus Photo 1400.

Written By: Luis Ruiz



## INTRODUCTION

The purpose of this guide is to show how to clean the Epson Stylus Photo 1400. Maintenance should be done several times per year for consistent performance.

- Caution: Do not touch the gears or any other parts inside the printer.



### TOOLS:


- [Soft Brush](#) (1)
  - [Soft Cloth](#) (1)
-

## Step 1 — How to clean the Epson Stylus Photo 1400



- Turn off the printer.
- Remove all paper and CD/DVD tray.
- Disconnect power from wall socket.
- Disconnect USB cord from printer.

## Step 2 — Clean the tray feeder.

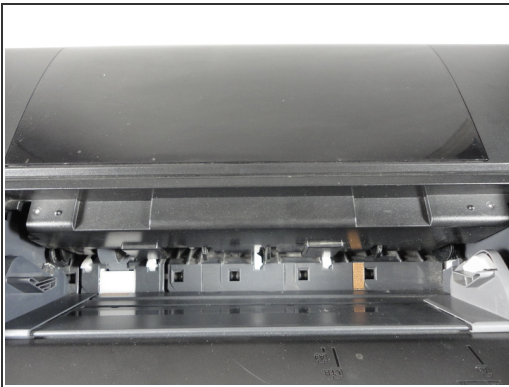


- Use a soft brush to clean the sheet feeder.

**i** If there are ink spots or dirt on the inside of the printer, use cloth to clean the plastic area shown.




### Step 3 — Clean the inside.

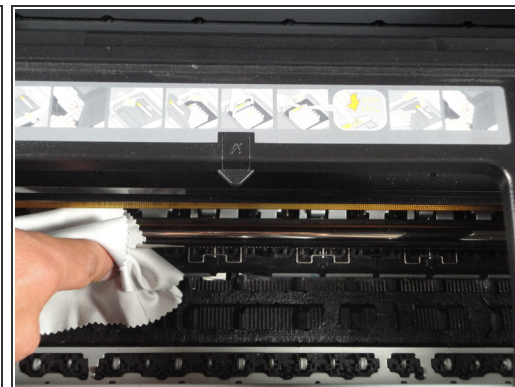

- Use cloth to clean the plastic parts and metal bar.

⚠ Try not to touch the roller gears.

### Step 4 — Clean the bottom.

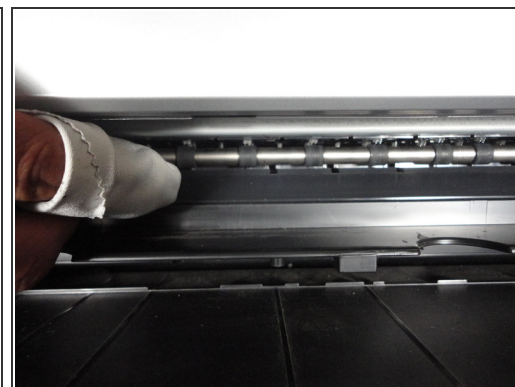

- Wipe off the roller on the bottom with the cloth.
- Clean off any dust on the plastic tray.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 07:58:38 AM.